

Thank you for purchasing this Dynojet kit. This kit has been developed for a motorcycle which is set to the parameters listed at the right in the "Stage" description. If your motorcycle does not meet any of these parameters please check with Dynojet before installation. For technical assistance contact your Dynojet distributor or call Dynojet U.S.A. (800)-992-4993



**2106.001**

U.S Models Only

**2006 Kawasaki KX450F**


**Stage 1**

2191 Mendenhall Dr. Suite 105  
North Las Vegas, NV 89081  
TEL: 702-399-1423  
FAX: 702-399-1431  
8am-5pm Pacific Time  
Monday through Friday

Website Address  
<http://www.dynojet.com>

The manufacturer and seller make no warranties express or implied which extend beyond the description of the goods contained herein. Any description of this product is for the purpose of identifying it and shall not be deemed to create an express warranty.

For mildly tuned machines using the stock airbox with stock or K&N filter.  
May also be used with a good high flow aftermarket exhaust.

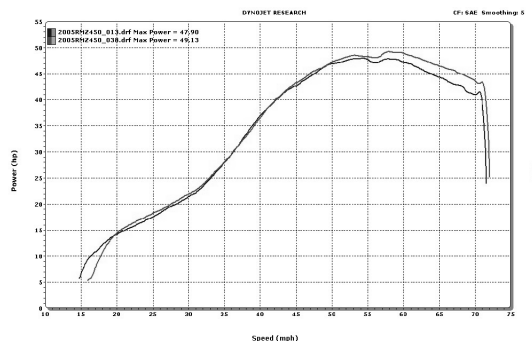

*This graph shows a typical gain with a Dynojet jet kit.*

# WARNING

**NO SMOKING!  
NO OPEN FLAME!  
WHILE INSTALLING  
YOUR DYNOJET KIT**

<b>Parts List</b>		
1	Main Jet	CJ155
1	Main Jet	CJ160
1	Main Jet	CJ165
1	Main Jet	CJ170
1	Main Jet	CJ175
1	Fuel Needle	DNO989
1	E-clip	DE0001
1	Adjusting Washer	DW0001
1	Main Jet Adapter	DJA001

## STAGE ONE INSTRUCTIONS

**NOTE:** This kit can be installed without completely removing the carburetor.

1. Remove the top of the carb. Remove the allen screw (Fig. A) and pull out the stock needle and spacers, noting order of assembly.
2. Install the Dynojet needle on groove #4 from the top. Use all stock spacers (Fig. A). Install the small Dynojet washer above the e-clip.
3. Remove the stock main jet. **NOTE:** The main jet can be accessed by removing the nut from the bottom of the float bowl (Fig. B). Install the Dynojet main jet adapter (DJA001) into the emulsion tube first, then install the Dynojet main jet provided. If you are running the stock exhaust, install the CJ165 for under 3000 ft. Install the CJ160 main jet from 3000-6000 ft. Install the CJ155 main jet if above 6000 ft. If you are running an aftermarket exhaust or slip-on with high flowing baffle, use the CJ170 main jet below 3000 ft. Install the CJ165 main jet from 3000-6000 ft. Install the CJ160 main jet if above 6000 ft.
4. Locate the fuel mixture screw (Fig. B). Carefully turn the mixture screw clockwise until lightly seated, then back out 2.5 turns.

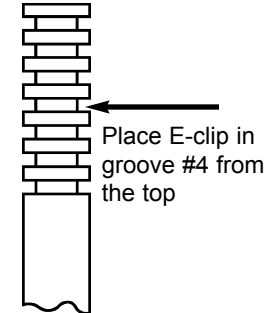


Fig. A

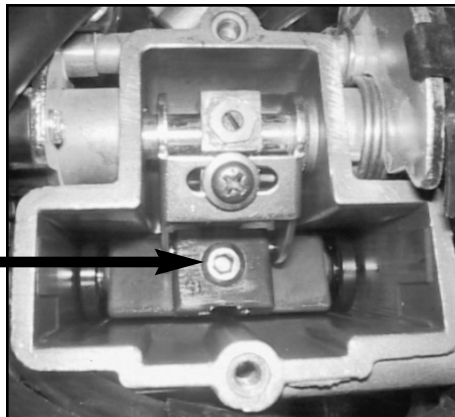


Fig. B

